

Sony Digital Photo Printer
UP-CR20L



How to create:

- Border data
- Logo stamp data



1

Creating a Template

UP-CR20L

Create a border design using image editing software.


Image Size

Create image data with the correct size, as follows.

Print Size	Orientation	Image Size (H x V pixels)
3 x 5 inch	Landscape	1728 x 1210
9 x 13cm	Portrait	1210 x 1728
4 x 6 inch	Landscape	2048 x 1382
10 x 15cm	Portrait	1382 x 2048
5 x 7 inch	Landscape	2380 x 1728
13 x 18cm	Portrait	1728 x 2380
6 x 8 inch	Landscape	2724 x 2048
15 x 20cm	Portrait	2048 x 2724

Transparent

The transparent is effective in the border.

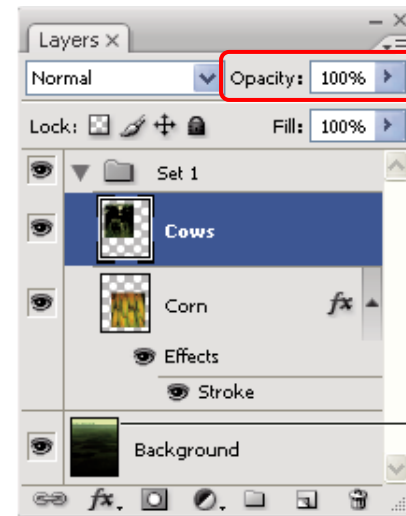

Set the transparent level.

Data Format

Only image data in PNG format can be used.

Please save the data as PNG.

The color tone which can be handled is 32 bits (24 bits RGB + 8 bits alpha channel).



1

Creating a Template

UP-CR20L


Create a border design using image editing software.

Area Which may not be Printed


A portion of up to 65 pixels inward from each edge of the image may not be printed.

However, you can set guide lines via the Photoshop Guide View to check that important parts of the image are inside this portion.


1 From the [View] menu, select [New Guide..]

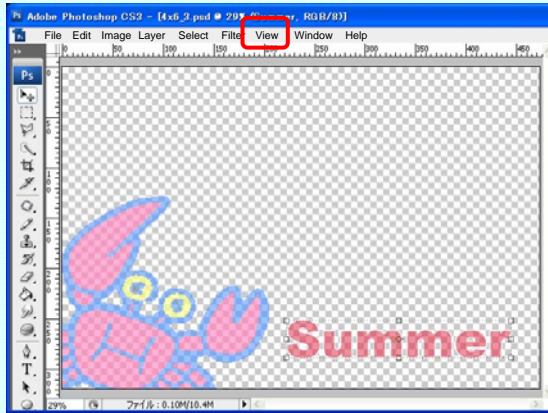

3 You will now see the guide line on the image.

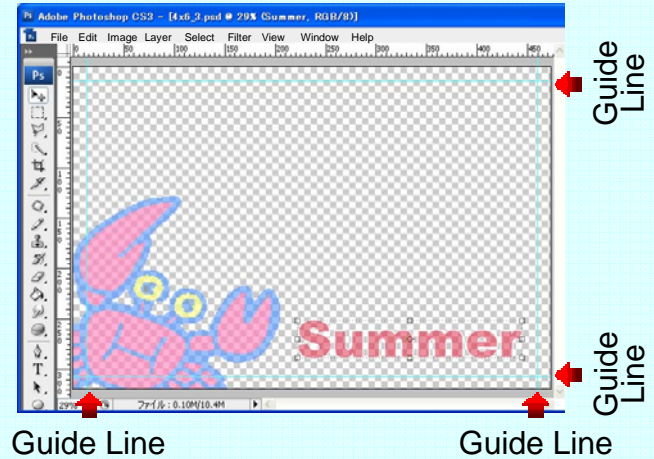

2 The below dialog box will appear.
Input the relevant number from the table and click the [OK] button.

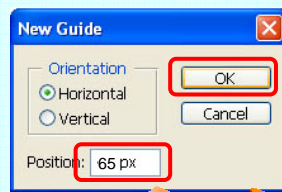

	Horizontal		Vertical	
	Top Edge	Bottom Edge	Left Edge	Right Edge
3 x 5inch / 9 x 13cm	65 pixel	1145 pixel	65 pixel	1663 pixel
4 x 6inch / 10 x 15cm	65 pixel	1317 pixel	65 pixel	1983 pixel
5 x 7inch / 13 x 18cm	65 pixel	1663 pixel	65 pixel	2315 pixel
6 x 8inch / 15 x 20cm	65 pixel	1983 pixel	65 pixel	2659 pixel




2

Using the Utility Software



UP-CR20L Export the image data to the template data.


1 Double click on the "SonySnapLabUtility.exe".





3 Click the "PNG Export Tool".




4 Click the [Brows...] button to locate the PNG file.

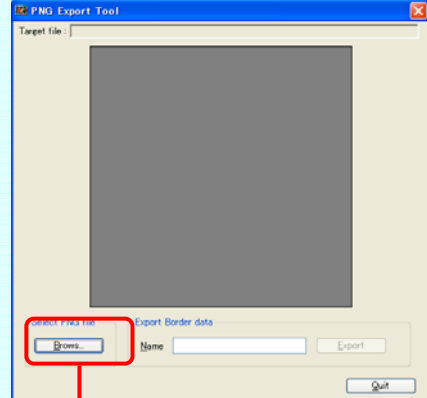

2 Select the "Printer" and click the [Browse Folder] button.

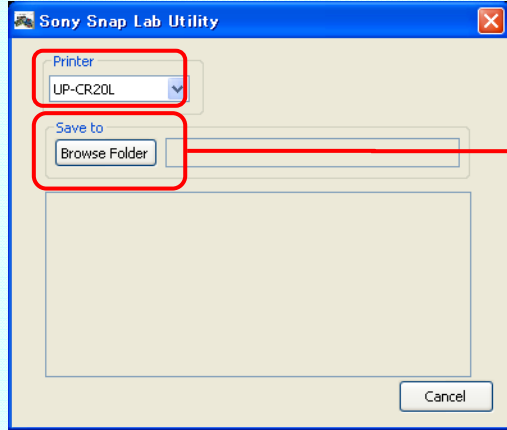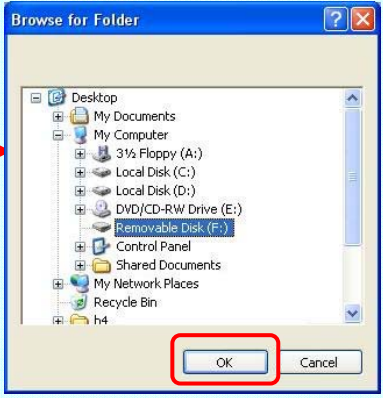Select the drive where the template data will be stored.

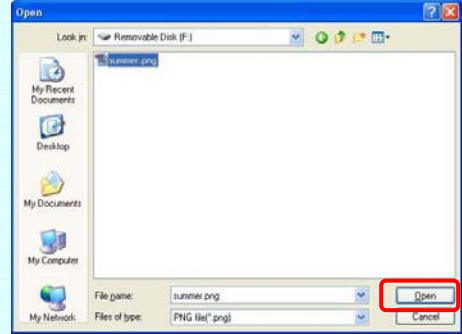

Select the PNG file to be used for the template and click the [Open] button.



2

Using the Utility Software




UP-CR20L

Export the image data to the template data.

5

Input the "Name" and click the [Export] button.

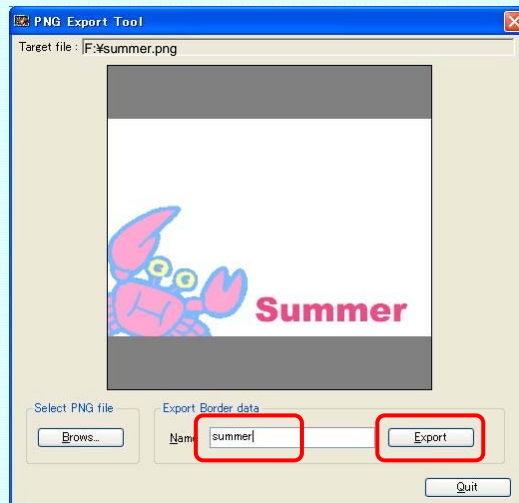

Template Name:

If creating a Border, this can be:

- Any name, except prohibited characters in Windows, characters using 2 bytes code, and KANA characters.
- Any name, except the following:
"AUX", "CON", "NUL", "PRN", "CLOCK", "COM0"~"COM9", "LPT0"~"LPT9"

If creating a Logo Stamp, use one of the following:

__SnapLabPrintLogo

(Note: "__" is a double underscore.)




2

Using the Utility Software



UP-CR20L

Export the image data to the template data.

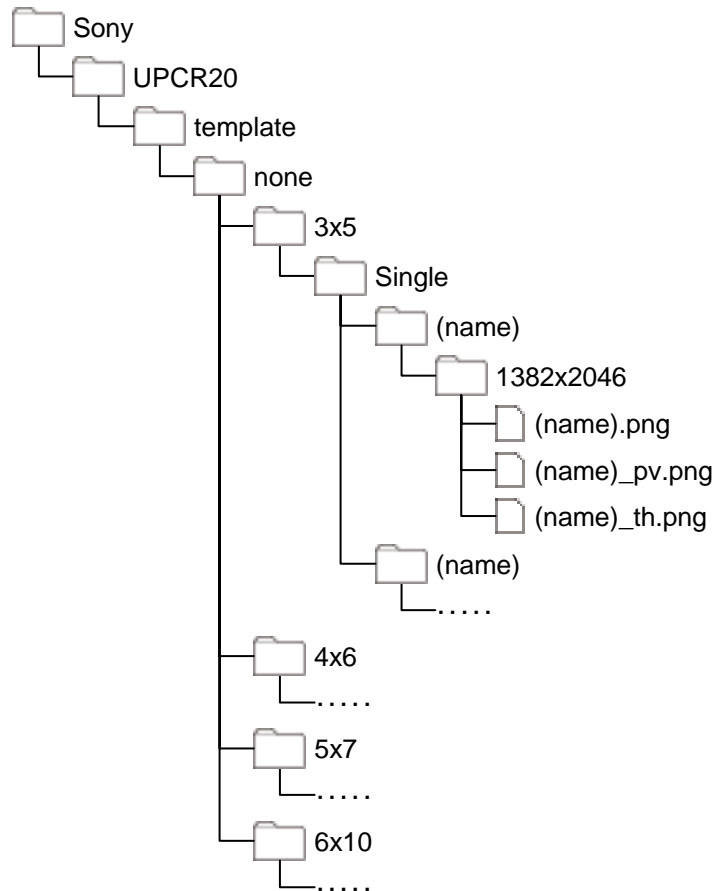

When the Utility software is used, the following folders and files are created on the destination drive.




3

Transferring Templates

UP-CR20L

Copy the template data to an expansion CompactFlash card.

Utility Software

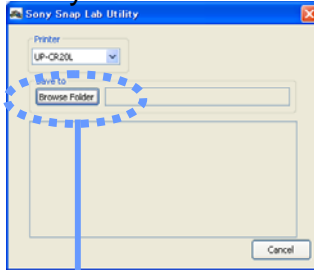

If your PC does not have a CompactFlash slot...

See the next page.

To write the template data directly to an expansion CompactFlash card...

STEP 1



Export the template data to an expansion CompactFlash card by specifying its drive letter.

STEP 2



Insert the expansion CompactFlash card into the designated CompactFlash slot on the UP-CR20L.




3

Transferring Templates

UP-CR20L

Copy the template data to an expansion CompactFlash card.

Utility Software

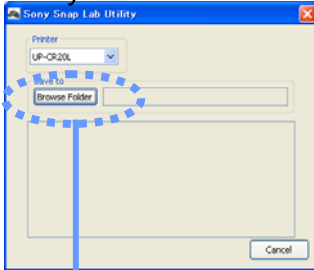

To write the template data directly to an expansion CompactFlash card... → See the previous page.

If your PC does not have a CompactFlash slot...

STEP 1



Export the template data to a memory card by specifying its drive letter.

STEP 2



Insert the memory card and expansion CompactFlash card into the UP-CR20L.

STEP 3



Copy the data from the memory card to the expansion CompactFlash card, using the template tab of the administration screen.